


AUG 23 1973

VISTAR

TECHNICAL USER'S MANUAL

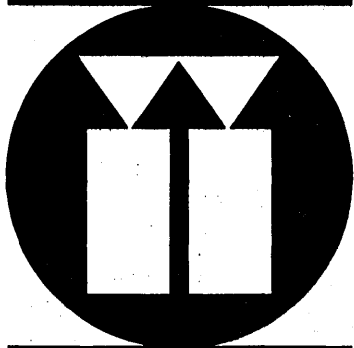



Infoton

VISTAR

CONDENSED SPECIFICATION SHEET

INFOTON INCORPORATED • SECOND AVENUE, BURLINGTON, MASSACHUSETTS 01803 • AREA CODE (617) 272-6660

Infoton

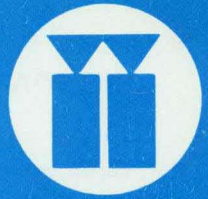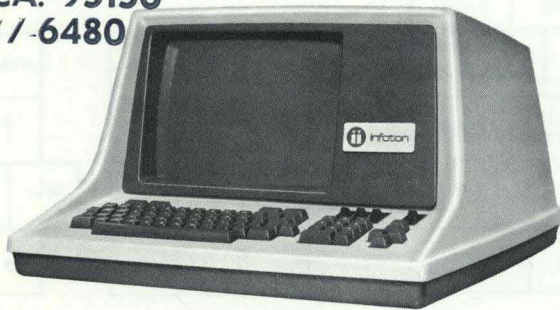**INFOTON, INC.****C. KENT RIPLEY****P. O. Box 6611****San Jose, CA. 95150****(408) 377-6480****GENERAL DESCRIPTION**

The Infoton Vistar Display Terminal is a stand-alone alpha-numeric display designed for both buffered (block) or unbuffered (character) data transmission. It can be used as a substitute for a teletype® in either conversational or message oriented applications. As a completely self-contained desk-top unit, the Vistar is ideally suited for two-way, high-speed data communication over common voice grade telephone lines or two-wire local connection to an on-line computer. Incorporated into each Vistar is a keyboard, video presentation, control and refresh electronics, power supply and both an RS-232C and current loop interface.

DISPLAY CHARACTERISTICS

Characters/Line	80
Lines/Display	24
Character Set	64 character ASCII (upper case)
Character Format	5 x 7 dot matrix (upper case)
Character Size	0.08" x .19" nominal
Cursor	Non-destructive blinking underscore
Refresh Rate	50 or 60 Hz
Viewing Area	9" x 7"
Color	White - P4 phosphor
Readability	Screen easily read without disruptive reflections in 100 foot candle illumination
Size	13" high, 19" wide, 23" long
Weight	40 pounds
Power	125 watts
	105-125 volts, 60 Hz
	105-125 volts or 205-250 volts, 50 Hz (Export Model)
Temperature	0° to 50° C (operating) -30° to 70° C (storage)
Humidity	0 to 95% non-condensing
Standards	UL, CSA, BPO, VDE

MODES OF OPERATION**Buffered/Unbuffered**

In buffered (block) mode, the keyboard communicates directly with the memory of the Vistar. Data is transmitted either line by line or in one complete page. All transmissions include data compression. In unbuffered (character) mode, the keyboard communicates only to the data line, and the Vistar functions like a teletype; one character transmission at a time.

Full/Half Duplex (Unbuffered Only)

Full Duplex - Keyboard output to outgoing data line.

Display input from incoming data line.

Half Duplex - Keyboard output to display and to data line. Display input from keyboard and data line.

Local/On-line

Local - Data line disconnected. Operation as in Half Duplex.

On-Line - Data line connected.

Page/Roll

Roll - When the format rolls up one line, the former top line of display is lost; the bottom line is blank.

Page - Whenever the cursor is in the last line, any action that would normally move the cursor down one line moves the cursor to the corresponding column in the top line.

COMMAND FUNCTIONS

Erase Screen, Erase to End of Line.

Line Feed, Carriage Return

Cursor Right, Left, Up, Down, and Home

Page Mode/Roll Mode

Transmit Line /Transmit Page

Bell (70th character position)

INTERFACE

The Vistar provides both an EIA RS-232C and a 20 or 60 milliamper current loop interface with START/STOP character format. Eleven internally generated, switch-selectable transmission speeds and one externally controlled speed are possible. Full duplex/half duplex operation and parity generation are switch selectable. Transmits and receives 10 or 11 bit code.

Switch-selectable data rates are 75, 110, 150, 300, 600, 1200, 1800, 2400, 4800, 7200, 9600 bits per second and External. The External setting allows a data rate of up to 1800 characters per second. External timing is derived from a TTL compatible pulse source at 16 times the data rate.


The interface also allows for switch-selectable data transmission of 75 or 110 bits per second and a reception rate at other selectable speeds.

KEYBOARD

Layout – The VISTAR keyboard includes a Model 33 teletype compatible alphanumeric section, eleven key numeric pad and cursor control cluster.

Rollover – when one key is already depressed and a second key is then depressed, the code for the second key will not be generated until the first key is released.

Repeat – when a code or function-generating key is depressed along with Repeat key, the code or function will be repeated at a rate of 10 per second.

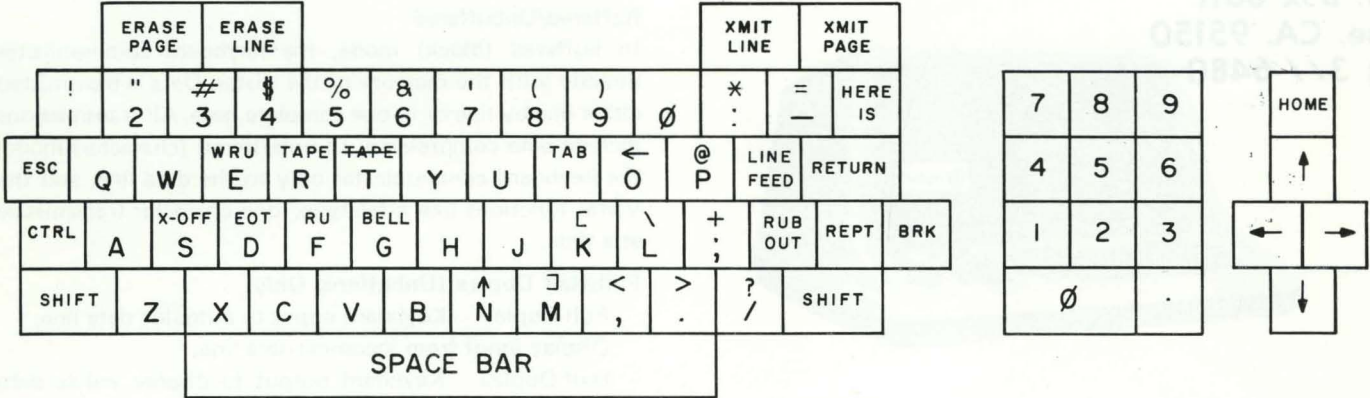


CODE SET

The following codes are used as indicated in the VISTAR.

Bits 4, 3, 2, 1	Bits 7, 6, 5							
	000	001	010	011	100	101	110	111
0000	NULL		SPACE	0	@	P	@	P
0001			!	1	A	Q	A	Q
0010			"	2	B	R	B	R
0011			#	3	C	S	C	S
0100			\$	4	D	T	D	T
0101			%	5	E	U	E	U
0110			&	6	F	V	F	V
0111	BELL		'	7	G	W	G	W
1000	HOME		(8	H	X	H	X
1001		CURSOR RIGHT)	9	I	Y	I	Y
1010	LF	CURSOR LEFT	*	:	J	Z	J	Z
1011	ERASE EOL	ESC	+	;	K	[K	[
1100	ERASE PAGE	CURSOR UP	,	<	L	\	L	\
1101	CR	CURSOR DOWN	-	=	M]	M]
1110	XMIT LINE	XMIT PAGE	.	>	N	↑	N	↑
1111			/	?	O	←	O	RUB OUT

The area enclosed by dashed lines represent lower case codes displayed as upper case characters.

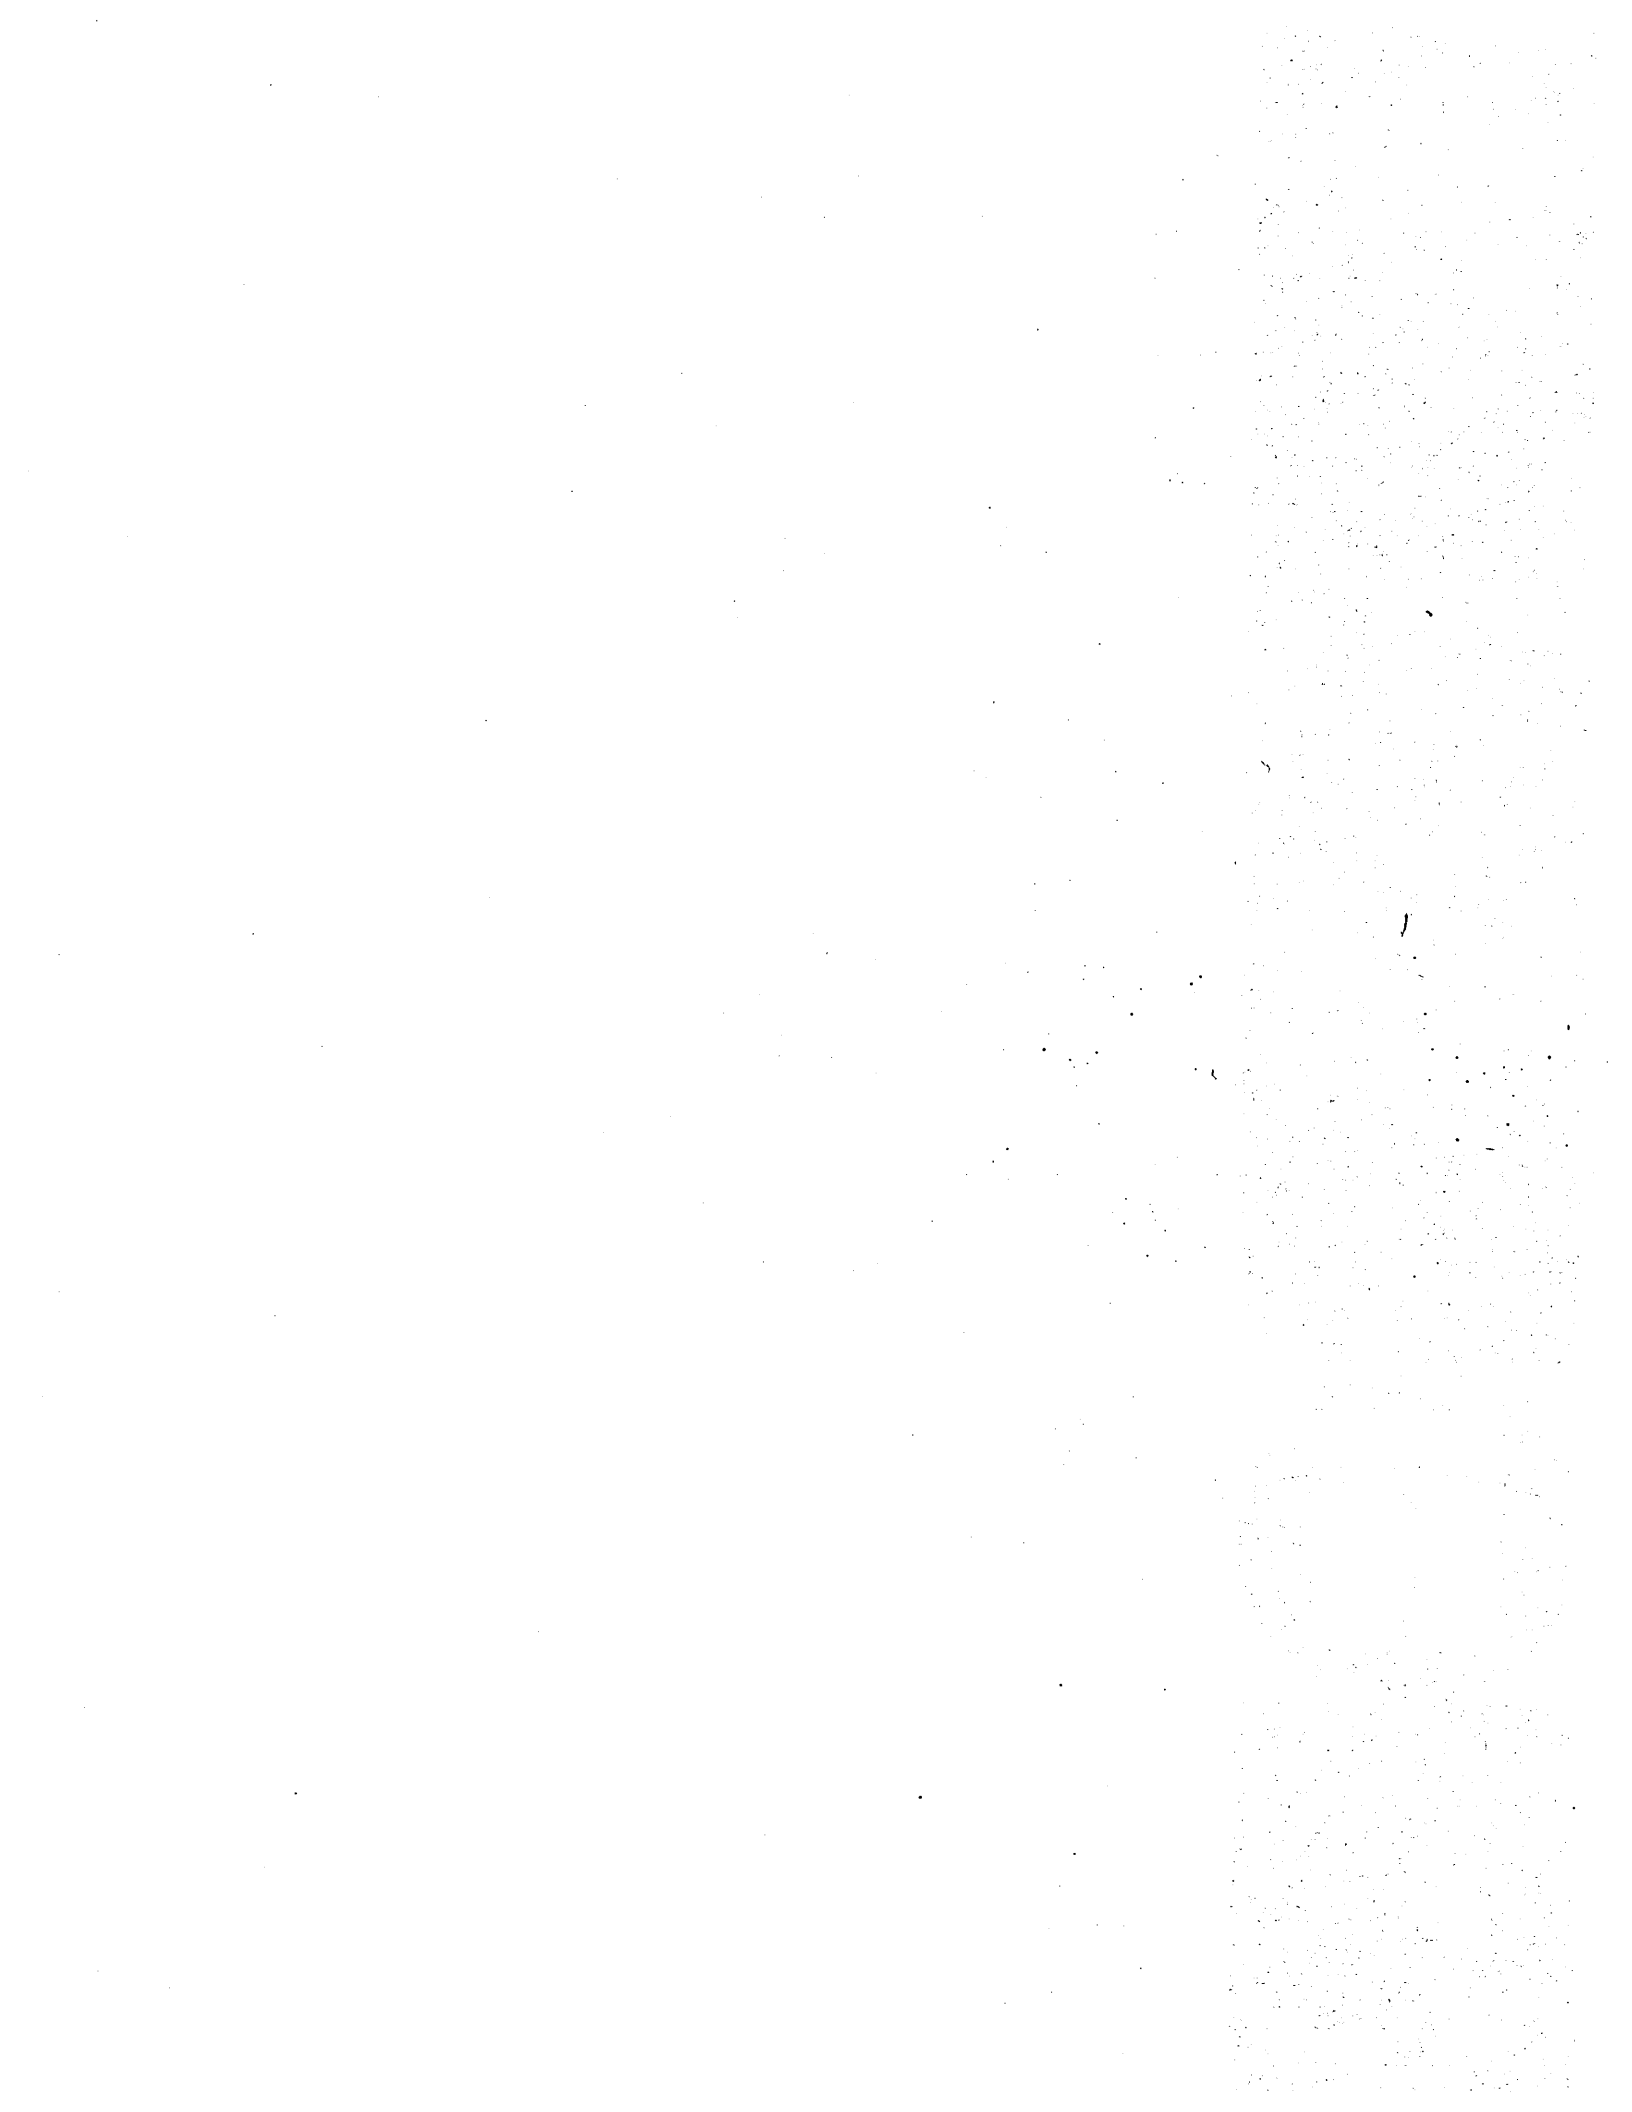

VISTAR

TECHNICAL USER'S MANUAL

INFOTON
TECHNICAL USER'S MANUAL
VISTAR

TABLE OF CONTENTS

	Page No.
1. INTRODUCTION	1
2. SUMMARY OF CHARACTERISTICS	3
Interchangeable with Teletype	3
Easy-to-Read Characters	3
High-Speed Transmission Rates	3
Choice of Computer Interface	3
Roll or Page Mode	3
Cursor Control	3
Erase Page and Erase to End of Line	3
Transmission Modes	3
Print Mode	3
Detached Keyboard Model	3
3. VISTAR SPECIFICATIONS	5
Screen Format	5
Mechanical	5
Environmental	5
Controls, Switches and Connectors	5
Electrical	6
Standards	6
4. FUNCTIONAL DESCRIPTION	7
Local/On Line	7
Character Mode	7
Block Operation	7
5. OPERATIONAL FEATURES	9
Teletypewriter Compatibility	9
Cursor	9
Roll Mode	9
Page Mode	10
Response to Commands	10
Erase Screen	10
Erase to End of Line	10
Bell	10
Carriage Return	10
Line Feed	10
Null	11

TABLE OF CONTENTS – Continued

	Page No.
5. OPERATIONAL FEATURES (CONT.)	
Break	11
Rubout	11
Home	11
Cursor Controls	11
Transmit Line	11
Transmit Page	11
6. EQUIPMENT DESCRIPTION	13
Keyboard	13
Display	14
Control Logic	14
Controls	16
7. INTERFACE	17
Introduction	17
Asynchronous Serial Interface	17
Wiring of Current Loop Interface	20
8. COMPATIBILITY WITH OTHER INFOTON VISTAR SERIES DISPLAY TERMINALS	23
9. OPERATING INSTRUCTIONS	25
Initial Setup	25
Establish Communication	25
Appendix A – VISTAR Code Set	27
Appendix B – VISTAR Input-Output Codes	29
Appendix C – Multipurpose Asynchronous Serial Interface EIA Signals and Pin Connections	33

LIST OF FIGURES

	Page No.
Figure 1-1. VISTAR Display Terminal	1
Figure 6-1. VISTAR Keyboard	13
Figure 6-2. Dot Matrix Character Format	15
Figure 6-3. Dot Matrix with Cursor	15
Figure 6-4. Location of TV Controls on VISTAR	16
Figure 7-1. VISTAR Interface Panel	18
Figure 7-2. Wiring to VISTAR Current Loop Terminal Strip	21
Figure 7-3. I/O Rates as a Function of Distance	22

1. INTRODUCTION

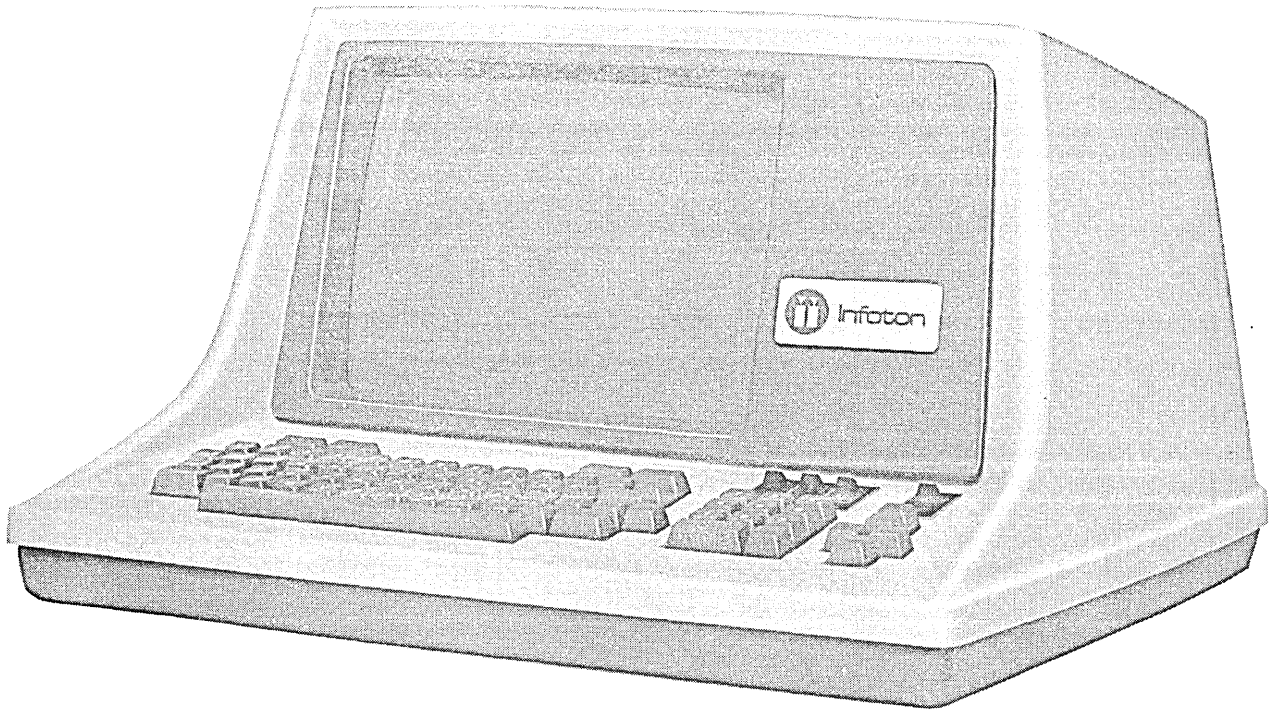


Figure 1-1 VISTAR Display Terminal

The INFOTON VISTAR Display Terminal is an alphanumeric display designed for use with an on-line computer as a high speed, silent, interactive terminal device. It can be utilized as a substitute for a teletype © in either an unbuffered (character-by-character) conversational mode or in a buffered (block) mode transmitting either a line or a page at a time. As a completely self-contained desk-top unit, the VISTAR is ideally suited for high speed, two way data transmission over common voice grade telephone lines. Incorporated into each unit is a keyboard, power supply, video presentation control, refresh electronics and both an RS-232C and current loop interface for on-line connection to a dataphone, computer or teletype.

©Registered trademark of Teletype Corporation

30-107-0000-0000-0000-0000-0000-0000

2. SUMMARY OF CHARACTERISTICS

INTERCHANGEABLE WITH TELETYPE

The VISTAR can be substituted for a Model 33 or 35 teletype with no hardware or software modifications. The VISTAR can serve as an upgraded high speed terminal to all time-sharing services using ASCII * Code regardless of the computer system used by the service.

EASY-TO-READ CHARACTERS

High resolution, non-reflecting screen, and contrast-enhancing filter permit easy viewing at distances up to 10 feet under direct glare and 100 foot-candle illumination.

HIGH-SPEED TRANSMISSION RATES

Eleven switch-selectable transmission rates from 75 to 9600 bits per second are provided.

CHOICE OF COMPUTER INTERFACE

The unit is supplied with two forms of asynchronous serial interfaces; i.e., a standard EIA RS-232C interface and a 20 or 60 ma TTY style current loop.

ROLL OR PAGE MODE

The VISTAR may be operated in either Roll or Page Mode, depending upon the position of a convenient front panel switch.

CURSOR CONTROL

The unit has a non-destructive position marker or cursor displayed as a blinking underscore. The cursor position can be tracked and manipulated by the computer or the operator to any position on the screen.

ERASE PAGE AND ERASE TO END OF LINE

The full screen may be erased with one command. With another command, the unit will erase all characters from the cursor position to the end of the line in which the cursor resides.

TRANSMISSION MODES

The VISTAR may operate either in a character-by-character transmission mode, exactly as a teletype, or in Block Mode, in which data is not sent until a transmit command is generated. The choice of modes is made by a convenient front panel switch.

PRINT MODE

The VISTAR offers a simple two-wire connection to an external peripheral device such as a printer or tape cassette. Data transmission to such a peripheral is determined by the Xmit/Print control switch located on the front panel.

DETACHED KEYBOARD MODEL

The VISTAR is also available with a detachable keyboard that is separately packaged and connected to the display by a flexible cable.

* *American Standard Code for Information Interchange.*

3. VISTAR SPECIFICATIONS

SCREEN FORMAT

Characters per line	80
Lines per display	24
Character set	64 character ASCII upper case
Character format	5 x 7 dot matrix
Character size	0.08 inch x 0.19 inch, nominal
Refresh rate	50 Hz or 60 Hz
Viewing area	9 inches x 7 inches
Color	White - P4 phosphor
Readability	Screen easily read without disruptive reflections in a 100-foot illumination.

MECHANICAL

Size	13 inches high, 19 inches wide, 23 inches deep
Weight	40 pounds

ENVIRONMENTAL

Operating temperature	0° to 50° C
Storage temperature	-30° to 70° C
Humidity	0 to 95% non-condensing

CONTROLS, SWITCHES AND CONNECTORS

	<u>Front</u>	<u>Side</u>	<u>Rear</u>	<u>Internal</u>
On/Off Switch	X			
Local/On Line Switch	X			
Roll/Page Switch	X			
Character/Block Transmission	X			
Xmit/Print Switch	X			
TV Intensity		X		
TV Horizontal		X		
TV Vertical		X		
Received Data Rate Selector			X	
Transmitted Data Rate Selector			X	
Full/Half Duplex Switch			X	
10/11 Bit Code Switch			X	
Automatic Carriage Return Switch			X	
Odd/Even/Mark Parity Switch			X	
Current Loop Wiring Strip			X	
EIA Connector			X	
External Video Jack			X	
115/230 Volt Wiring Connections				X
50/60 Hz Refresh Switch				X

ELECTRICAL

Power consumption	125 watts
Domestic power	105 - 125 volts; 60 Hz
Export power	105 - 125, 205 - 250 volts; 50 Hz

STANDARDS

Underwriter's Laboratory

Export models will conform to requirements established by British Post Office Telecommunications Headquarters, the standards of the Verein Deutscher Elektrotechniker (VDE), and the Canadian Standards Association (CSA).

4. FUNCTIONAL DESCRIPTION

The VISTAR Display Terminal is a completely self-contained desk top unit which can be used as a plug-for-plug replacement for a teletype. The unit consists of a keyboard, video monitor, refresh memory, control logic, and serial data interface. The modes of operation and communications are described in the following paragraphs.

LOCAL/ON LINE

In LOCAL, the VISTAR is disconnected from the data line but is functional in all other respects. The LOCAL position is used only for demonstration and testing purposes. The LOCAL/ON LINE selection is made by a switch on the front panel of the terminal.

The remainder of this description refers to various types of ON LINE operation.

CHARACTER MODE

In the Character Mode, the keyboard communicates only to the interface transmitter, and only the interface receiver communicates to the display memory. All transmissions are on a character-by-character basis. All codes generated by the keyboard, including control or function codes, go directly to the transmitter and then to the data lines.

When in Character Mode, the VISTAR may be placed in full or half duplex. In half duplex, the interface receiver is actuated in series with the transmitter, and transmitted codes are routed back through the receiver and displayed. Control codes either perform their specific function (e.g., BELL, CURSOR RIGHT, etc.) or are ignored.

In full duplex, the receiver is independent of the transmitter. Only data received from the data line will appear on the display. As in half duplex, control codes either perform their specific function or are ignored. In full duplex, therefore, information will be displayed only if the computer at the end of the data line echoes back the information transmitted from the keyboard.

BLOCK OPERATION

In Block Mode, the keyboard communicates directly to the memory of the VISTAR. Function or control codes are stored in the memory only if they are generated in conjunction with the depression of the CONTROL key. For example, the CURSOR UP code does not go into memory unless both the CURSOR UP key and the CONTROL key are simultaneously depressed (Cursor Up will also be stored if generated by simultaneous depression of the CONTROL, SHIFT, and L keys). Control codes in memory are displayed by a non-blinking underscore and the equivalent alphanumeric character or symbol.

After a message has been entered from the keyboard, the operator may initiate a transmission by simultaneously depressing the SHIFT key and either the Transmit Line or Transmit Page key.

All transmissions include data compression. A series of SPACE characters completing a line will be ignored whenever the Transmit Line or Transmit Page function is executed. In the case of Transmit Page, the transmission proceeds immediately to the next line after data compression; hence the operator is required to insert his own control code(s) at the end of line in order to divide the page into lines and prevent word packing.

A switch on the rear panel is available to automatically insert a Carriage Return at the end of each transmission in the Block Mode.

Depression of the BREAK key places a space condition on the data line and terminates any transmission in progress. Detection of a BREAK condition by the receiver also terminates any transmission in progress.

In Block Mode, data received from the data line is presented directly to the display. However during transmission from the display, the receiver is disabled (except for detecting BREAK). Control codes received from the data line cause their associated function to occur and are not stored in memory.

5. OPERATIONAL FEATURES

TELETYPEWRITER COMPATIBILITY

The VISTAR reacts to the full ASCII character set (see Appendix A) receiving and storing both upper and lower case codes. For this reason, the VISTAR can be used without software modification in applications now using a Model 33 or 35 teletypewriter. The effect of each ASCII code on the VISTAR is shown in Appendix B. All characters are displayed as upper case characters. Lower case characters received on the data line are stored in memory and may be retransmitted, but will display as upper case characters. Although the terminal may be programmed as a teletypewriter, the full advantages of the VISTAR as an interactive terminal are realized when the software makes full use of the unit's features described in the following sections:

CURSOR

The cursor indicates the position at which the next data character will be displayed. The Home position for the cursor is the first position on the first line of the display; i.e., the upper left corner of the display.

The cursor appears on the display screen as a blinking underscore. It blinks approximately five times a second. The blinking prevents the operator from losing track of the cursor. The cursor will advance one step for each character that is typed. The cursor can be positioned by the cursor control keys or from the data line. There are five cursor movement commands and corresponding keys, namely, Home, Cursor Down, Cursor Up, Cursor Left, Cursor Right. The Carriage Return and Line Feed codes also generate cursor movements. These commands allow the operator or the computer to manipulate the cursor to any position on the screen.

The cursor is "non-destructive". In response to one of the cursor movement commands, the cursor moves but does not alter any data appearing on the screen.

The actual position of the cursor cannot be directly read by the computer. However, since all cursor movements entered by the operator via the keyboard are transmitted to the computer in the Character Mode, the computer can at all times follow the position of the cursor. This feature allows software editing on a page of textual data on the screen.

The computer can move the cursor to any X-Y coordinate by including the appropriate sequence of cursor movement Characters in a message being sent to the VISTAR. An efficient cursor moving algorithm can be constructed by using the "wrap-around" feature of the cursor movement at the edges of the screen. For example, the computer program or operator can move the cursor from the Home position to the lower right corner with a single Cursor-Left command.

ROLL MODE

The VISTAR is placed in Roll Mode by the setting of a switch on the front panel. When the screen fills, in Roll Mode, the data on the screen rolls up one line; the former top line is lost and the bottom line is blank. As line after line of text is written on the screen, the visual effect is that of a continuous scroll of text moving past a window.

Rolling is caused when the cursor is anywhere on the bottom line and a LINE FEED character is received by the terminal. Rolling is also caused when the cursor is in the bottom right corner of the screen and any displaying code including SPACE is received.

Cursor movement from one of the five basic cursor commands (Home, Cursor Right, Cursor Left, Cursor Up, and Cursor Down) will not cause a roll. When the cursor is in the

bottom line, Cursor-Down moves the cursor to the top line without rolling. From the bottom right position Cursor-Right moves the cursor to the top left position without rolling. This prevents inadvertent rolling during cursor manipulation by the operator.

The VISTAR has been designed so that no restrictions are placed on the high speed transfer of data in the roll mode. Data will not be lost even at 9600 bits per second.

PAGE MODE

In Page Mode any action that would otherwise cause the data to roll results in new data to be written over old data on the top line of the screen.

RESPONSE TO COMMANDS

The VISTAR terminal is controlled and manipulated from its data stream. The data stream control logic is defined as follows:

1. Certain characters are designated as command characters (Appendix B).
2. The computer inserts these command characters within the text transmitted to the VISTAR.
3. The VISTAR continually monitors the input data stream for these command characters, performing a designated action upon reception of a command character.

For example, when an Erase to End of Line command character is received by the VISTAR, the unit erases all characters from and including the cursor position to the end of line (the cursor does not move), and then examines the next character in the data stream to determine what action is to be taken.

A description of the commands used to control the display follows.

ERASE SCREEN

All data on the screen is erased. Cursor moves to Home position.

ERASE TO END OF LINE

Erases all data from, and including, the cursor position to the end of line. The cursor does not move. When a memory location is erased, a SPACE code is stored in that position rather than a NULL code.

BELL

The bell will sound for the following conditions:

- A. Receipt of the Bell Code (Control G) from the data line.
- B. Block Mode - The introduction of the 70th character on a line from the keyboard. The bell will not sound if a Bell Code is being transmitted from memory, nor if the cursor moves into the 70th position while the display is received or transmitting data.
- C. Character Mode - The movement of the cursor into the 70th position on a line.

CARRIAGE RETURN

Places the cursor in left-most position of the line in which the cursor resides.

LINE FEED

Moves the cursor down one line. In Roll Mode, causes rolling when the cursor is on the bottom line. In Page Mode, moves the cursor from the bottom line to the top line.

To prevent inadvertent double spacing of lines with exactly 80 characters, the VISTAR has

been equipped with a feature which inhibits Line Feed after line wrap-around. Line wrap-around occurs when a displaying code, Cursor Right code, or SPACE code causes the cursor to advance automatically from the 80th character position to the first character position of the next line. Following line wrap-around, the VISTAR will ignore a Line Feed until a character is put into memory or a second Line Feed is received.

NULL

No action is taken when this code appears on the data line. This code is generated from the keyboard by "Control Shift P".

BREAK

Depressing the break key forces a "space" condition on the data line as long as the key is depressed. Detecting a "Break" Code terminates any Transmit function when in Block Mode.

RUBOUT

Causes a rubout code (all one bits) to be transmitted. In Character Mode, no cursor movements occur and no character enters memory. In Block Mode, depression of the rubout key causes the rubout code to be entered into memory, displaying the parity error block.

HOME

Places the cursor in the first character position of the first line.

CURSOR RIGHT

Places the cursor one position to the right of its present position. If the cursor is in the last character of line, the next position is first position in the line below, or in the Home position if the cursor is in the last line.

CURSOR LEFT

Places the cursor one position to the left of its present position. If the cursor is in the first character of line, the next position is the last position of the line above, or in the bottom right position on the screen if the cursor is in the Home position.

CURSOR UP

Places the cursor one line above its present position. If the cursor is in the first line, the next position is in the corresponding position of the bottom line.

CURSOR DOWN

Places the cursor one line below its present position. If the cursor is in the last line, the next position is the corresponding position in the top line.

TRANSMIT LINE

The cursor returns to the beginning of the line it is in and the terminal transmits the entire line. After transmission, the cursor returns to the beginning of the line transmitted.

TRANSMIT PAGE

The cursor moves to the Home position, and the entire page is transmitted. After transmission, the cursor returns to the beginning of the bottom line.

6. EQUIPMENT DESCRIPTION

The basic VISTAR unit logically and physically consists of three parts; keyboard, display and control. These components and the controls and indicators on the unit are described in this section.

KEYBOARD

The operator interacts with the VISTAR and the computer via the keyboard shown below.

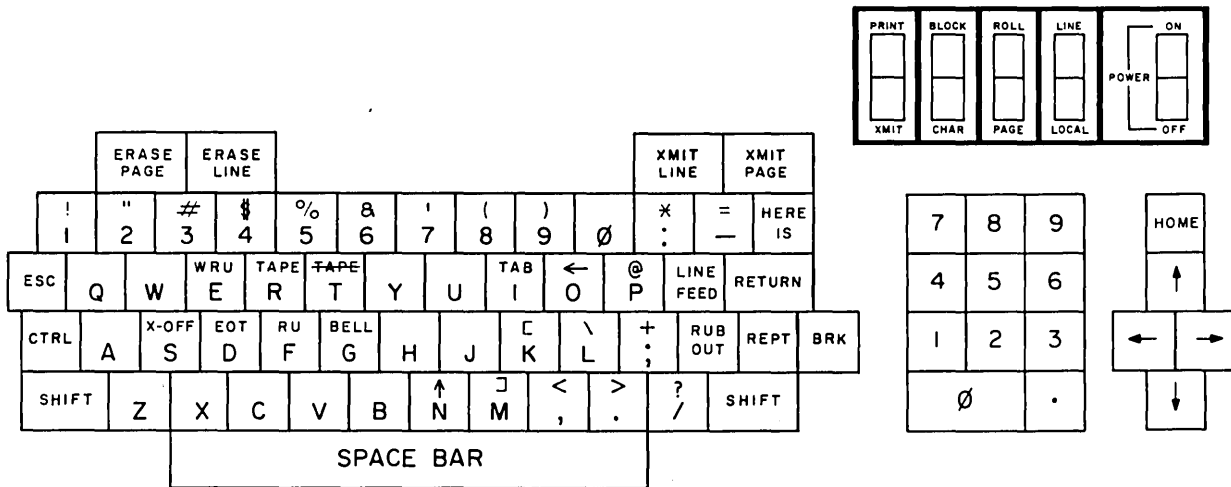


Figure 6-1 VISTAR Keyboard

The VISTAR keyboard is composed of three functional sections: namely, a set of 53 keys identical in placement to those of a Model 33 teletype; an eleven-key numeric pad; and a set of 5 cursor movements.

Appendix B illustrates the full code set, how to generate the codes from the keyboard, and the effect of the codes on the display.

Both the SHIFT key and the CTRL (Control) key establish a mode for the keyboard; i.e., data is not actually generated until a coded key is depressed. Depressing the SHIFT key in conjunction with another key causes upper case characters to be transmitted. The keyboard on the VISTAR generates upper case codes for the alphabetic characters whether or not the SHIFT key is depressed. The lower case codes are not generated by the VISTAR keyboard. For operator convenience, two SHIFT keys are on the keyboard. Each of these keys has the same effect on the data.

Control codes do not display in Character Mode, but in most applications are used as function codes. Some of the control codes have been used as functions for the VISTAR. For example, Control L erases the screen. Also, a few of the function codes are generated by depressing SHIFT and CTRL in conjunction with a coded key. An example is the Control Shift M code which is a cursor-down command. To simplify the entry of commands from the keyboard, function keys are provided for all commands. When depressed, the key labeled "↓" generates the cursor-down command (Control Shift M).

In the Block Mode, the depression of the Control key disables control functions and allows the insertion of control codes into memory. When a control code goes into memory, it is displayed by the equivalent alphanumeric character or symbol and a non-blinking underscore.

The HERE IS key is inoperative since no answerback function is offered for the VISTAR.

The REPEAT key when depressed in conjunction with a coded key or function key generates repeated transmission of the code or function at a rate of 10 characters per second.

The BREAK key places "space"; i.e., a logical "O" condition, on the data line for as long as the key is depressed. The BREAK key terminates any transmit function when in Block Mode.

The keyboard has an interlock feature and a roll-over feature which govern operation when two coded keys are simultaneously depressed.

When one key is depressed and a second key is subsequently depressed, the code for the second key will not be generated until the first key is released. No codes are generated if two or more keys are depressed simultaneously.

The keyboard is locked out when the beginning of a character on the data line is detected. No keyboard strobe can be generated until the received character is completed. This feature prevents the keyboard from garbling received characters.

DISPLAY

The display screen is a cathode ray tube (CRT) with a P4 (white) phosphor. The viewing area of the display is 9 inches wide and 7 inches high. The screen format is 24 lines, each 80 characters long.

The displayed characters are white on a dark background. The characters are generated on the display surface 50 or 60 times per second to provide flicker-free viewing. Characters are displayed on the screen in a rectangular array (i.e., horizontal lines and vertical columns). Each of the possible character positions on the display consists of a 7 x 10 matrix. The 5 x 7 dot matrix format is illustrated in Figure 6-2 for the letters J and K. The dot matrix forming the character is always in the upper left portion of the 7 x 10 matrix.

The position of the cursor within the 7 x 10 matrix is illustrated in Figure 6-3.

CONTROL LOGIC

The Control Logic contains the logic, power supply, central timing and control, refresh memory, character generator and communications interface. The most important functions of the Control Logic are:

- Stores in a refresh memory all data entered via the keyboard, or received over the communication line.
- Converts the ASCII characters into dot matrix form and presents them on the CRT.
- Maintains the display by refreshing the image at the rate of 50 or 60 times per second.
- Provides the electrical interface between the electrical operating levels of the VISTAR and the equipment with which the terminal is operating. The interface is described in detail in Section 7.
- Decodes command codes received on the data line and performs the appropriate function.

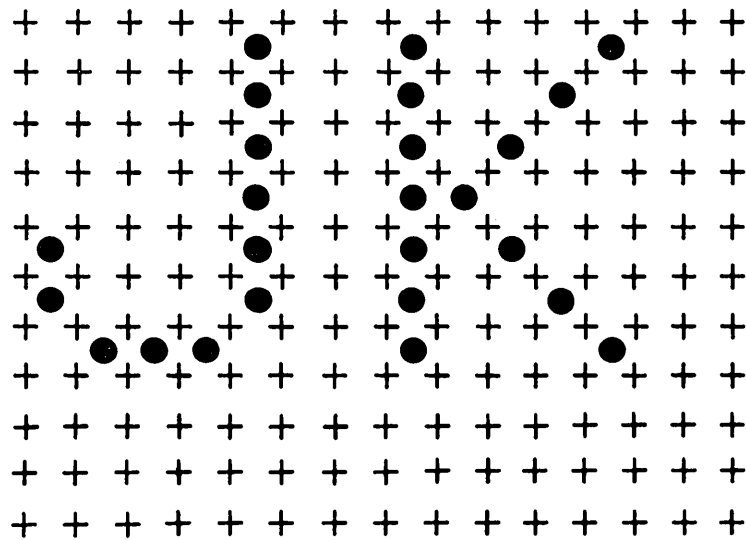


Figure 6-2 Dot Matrix Character Format

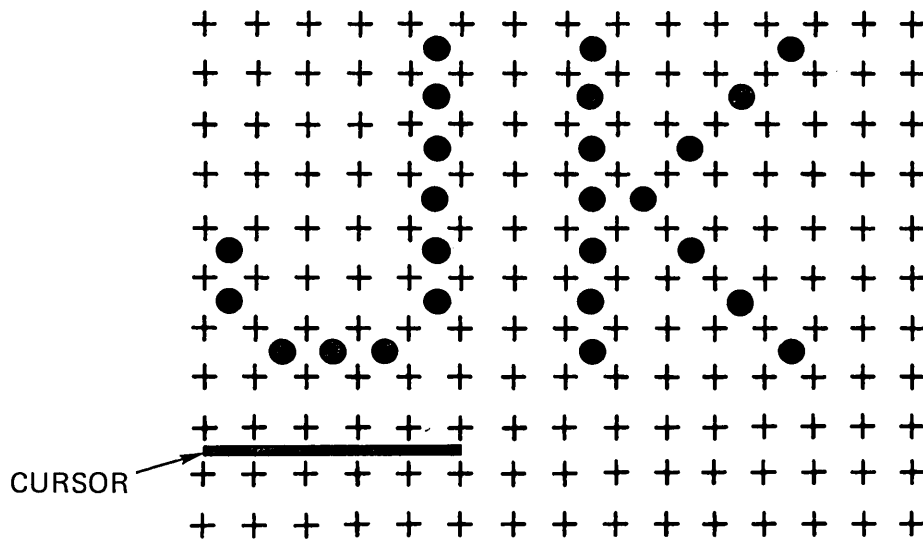


Figure 6-3 Dot Matrix with Cursor

CONTROLS

The following five operator controls are located on the front panel, in the plane of the keyboard:

- ON/OFF Switch - In the OFF position, power is not connected to the terminal. In the ON position the terminal is in the operating state. After the switch is turned to ON, a 30-second warm-up period is required. A light, built into the switch, glows when the switch is in the ON position.
- LOCAL/ON LINE Switch - This switch determines whether the terminal is disconnected from the data line (LOCAL) or connected to the data line (ON LINE).
- ROLL/PAGE Switch - This switch selects between Roll Mode and Page Mode operation.
- CHAR/BLOCK Switch - This switch determines whether the terminal transmits only when a Transmit command is generated (BLOCK), or whether each code is transmitted whenever its key is depressed (CHAR).
- XMIT/PRINT - This switch determines whether data will be transmitted to the data line (XMIT) or to a peripheral output device such as a printer or tape cassette (PRINT).

The three controls which govern the video presentation of characters are placed on the side of the unit to the operator's left. The INTENSITY knob permits the brightness of the screen to be set for the operator's comfort. The HORIZONTAL and VERTICAL controls allow adjustment for a stable picture. They correspond to the controls normally found on a commercial television receiver. Once these controls are set, they require infrequent adjustment.

The placement of the TV controls is shown in Figure 6-4 below.

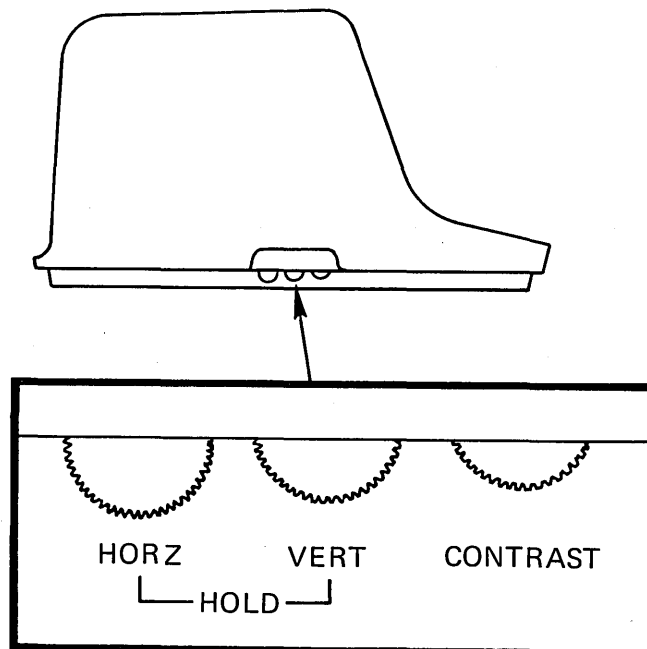


Figure 6-4 Location of TV controls on VISTAR (Side View of VISTAR)

7. INTERFACE

INTRODUCTION

The VISTAR operates with a computer over either telephone lines (via a modem) or on local connection by direct cable. The single interface accommodates a wide range of computer systems and a wide range of data rates. This has been accomplished by adhering to commonly accepted standards for data transmission mode, transmission method (asynchronous) and transmission rate. There are no restrictions imposed by data rate limits upon any of the command codes of the VISTAR. Thus cursor movement commands, erase commands, etc., may be executed at the maximum rate at which the terminal can accept ordinary displaying codes. The Interface Module makes the necessary conversion between the electrical operating levels of the VISTAR and those of the external circuit or computer with which the Interface Module is designed to operate. Also, the interface arranges data in the format required by the circuit or computer.

ASYNCHRONOUS SERIAL INTERFACE

The VISTAR communicates in a bit-serial, character asynchronous mode. The term asynchronous is synonymous with START-STOP and implies that the receiver comes to rest between characters. The START bit allows the receiving device to initiate its timing in proper synchronism with the incoming data. The STOP bit(s) ensure that the communication line is returned to the mark condition ready for a new START.

Transmitted data characters contain 10 or 11 bits, depending on the setting of a switch. (The Model 33 and 35 Teletype terminals transmit 11-bit code.) In receiving, the VISTAR will operate with 10 or 11-bit formats. It is customary to use an 11-bit format at 110 baud or below, and 10 bits at higher speeds, but the VISTAR is completely flexible both in transmission and reception.

The following bit configuration and character structure is used by the Asynchronous Interface:

- Bit:
1. START - "space" polarity - first bit transmitted
 2. b 1 - least significant data bit
 3. b 2 - data bit
 4. b 3 - data bit
 5. b 4 - data bit
 6. b 5 - data bit
 7. b 6 - data bit
 8. b 7 - most significant data bit
 9. Parity bit
 10. STOP - "mark" polarity
 11. STOP - "mark" polarity (note comments above on 11th bit).

When the interface is transmitting, it adds the start bit, computes and adds the parity bit, and adds the stop bit to every seven-bit code being sent. When it is receiving, it removes the start and stop bits, and transfers only the seven information bits to the appropriate logic.

When receiving, parity is checked. A code with incorrect parity is replaced by the RUBOUT code and displayed as a solid block on the 5 x 7 matrix.

Transmission is always initiated with the start bit. Bits b 1 through b 7, shown above, bear a one-to-one correspondence with the bits b 1 through b 7 of the ASCII code (reference

Appendix B). The "Space" and the "Mark" polarities are as defined by the EIA Standard RS-232C.* Even parity implies that the total number of ones in every character should be an even number; odd implies that it should be odd. Mark parity means that the parity bit is always set to 1.

The multipurpose interface card in the rear of the unit is shown in Figure 7-1. This interface allows a user to select a number of computer interfaces with any one of a number of data rates.

The interface panel shown in Figure 7-1 contains:

(a) Rotary Switch to Select Received Data Rate

This switch has 12 positions -- 75, 110, 150, 300, 600, 1200, 1800, 2400, 4800, 7200, 9600 bits per second and EXTERNAL. The external setting provides for handling data

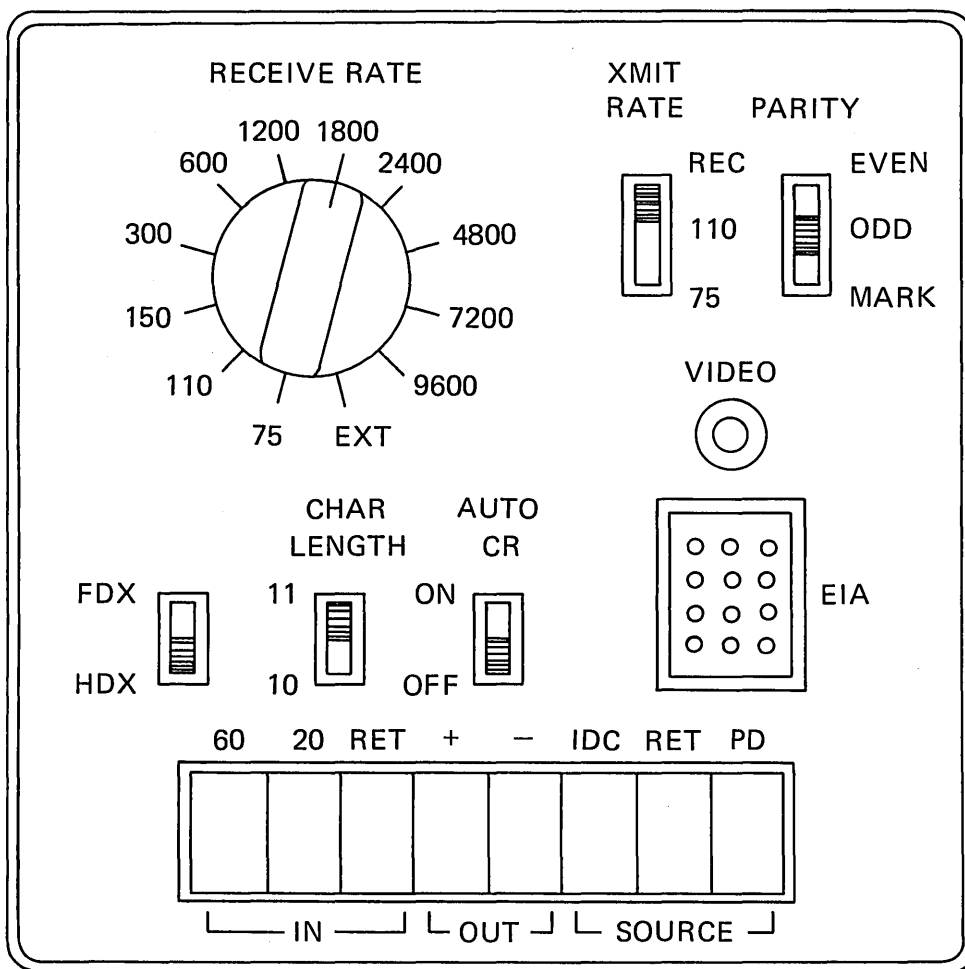


Figure 7-1 Vistar Interface Panel

* This is the accepted interface standard for serial data transmission which is adhered to by the communication carriers. It was formed by the Electronic Industries Association and issued as specification, RS-232. Version C is the current version of the specification.

rates other than the 11 fixed rates enumerated. The external clock must be a TTL compatible pulse source cycling at 16 times the data rate (maximum data rate is 1800 char/second).

(b) Slide Switch to Select Transmitted Data Rate

The three positions on this switch are labeled 75, 110, and RECEIVER. In the RECEIVER position, data will be transmitted at the rate determined by the rotary switch. The 75 and 110 baud positions permit a lower transmission data rate than the selected reception rate. Common dual speed rates in current use are 75/1200 and 110/2400, where the first and second figures are the transmission and reception rates, respectively.

(c) Slide Switch to Select 10 or 11 Bit Code

The setting of this two-position slide switch determines whether transmitted characters contain 10 bits (i.e., one STOP bit) or 11 bits (two STOP bits).

(d) Full Duplex/Half Duplex Switch

This two-position slide switch determines whether the terminal is operating in full duplex or half duplex. The position of this switch is of significance only when the terminal is in the Character Mode, as determined by the front panel switch. In the Block Mode, the setting of the full duplex/half duplex switch is immaterial.

(e) Automatic Carriage Return Switch

This two-position slide switch determines whether or not a Carriage Return code will be automatically transmitted at the end of each block transmission. Its position is immaterial in Character Mode.

(f) Parity Selection Switch

This three-position slide switch allows the selection of odd, even, or mark parity (in the Mark position, received parity is ignored).

(g) Current Loop Wiring Strip

Depending upon the wiring to the terminal strip connector screws, the current loop interface will be 20 or 60 milliamperes, full or half duplex. (The wiring also determines full duplex/half duplex operation in the current loop interface; the slide switch is significant only for the EIA interface and should be in the FDX position when operating current loop.)

(h) Printer Output

A pair of connector screws are provided which, when the Xmit/Print switch is in the PRINT position, supply a 20 milliamperes drive signal operated from the transmit logic. The switch in the PRINT position performs the following functions:

1. Routes transmitted data to the printer output.
2. Clamps the transmitter data line outputs in a marking condition.
3. Forces the unit into BLOCK mode.

The data rate selector switches must be in positions compatible with the driven device.

(i) EIA Connector

This MOLEX connector attaches to a cable supplied with the terminal. This cable is terminated with a 25-pin connector equivalent to Cannon DB-19604-432 or to the Cinch Jones and Cannon DB-25P. In Appendix C, the pin connections for both the MOLEX and the 25-pin connectors are specified.

(j) External Video Jack

A video jack provides a composite video signal, to allow connection of a remote monitor at a distance of up to 100 feet.

WIRING OF CURRENT LOOP INTERFACE

Full duplex and half duplex operation and 20 or 60 milliamperes operation are determined by wiring. Figure 7-2 illustrates the wiring for the various modes of operation. Also illustrated is how an internal current source can be used in half duplex mode. Two-wire or four-wire twisted pairs are recommended for half or full duplex, respectively.

Over limited distances (less than 250 feet) it is preferable to use a true current source input to the interface so that voltage drops in the circuit and line do not affect the signal current.

For driving long lines (greater than 250 feet), a simple voltage-resistor driving source may be used. Figure 7-3 shows the maximum data rates as a function of cable length for two voltages and two currents.

When the VISTAR is connected to the data line by the EIA RS-232C interface, the current loop output is also available for transmitting data to other VISTAR displays or to other Teletype-like devices.

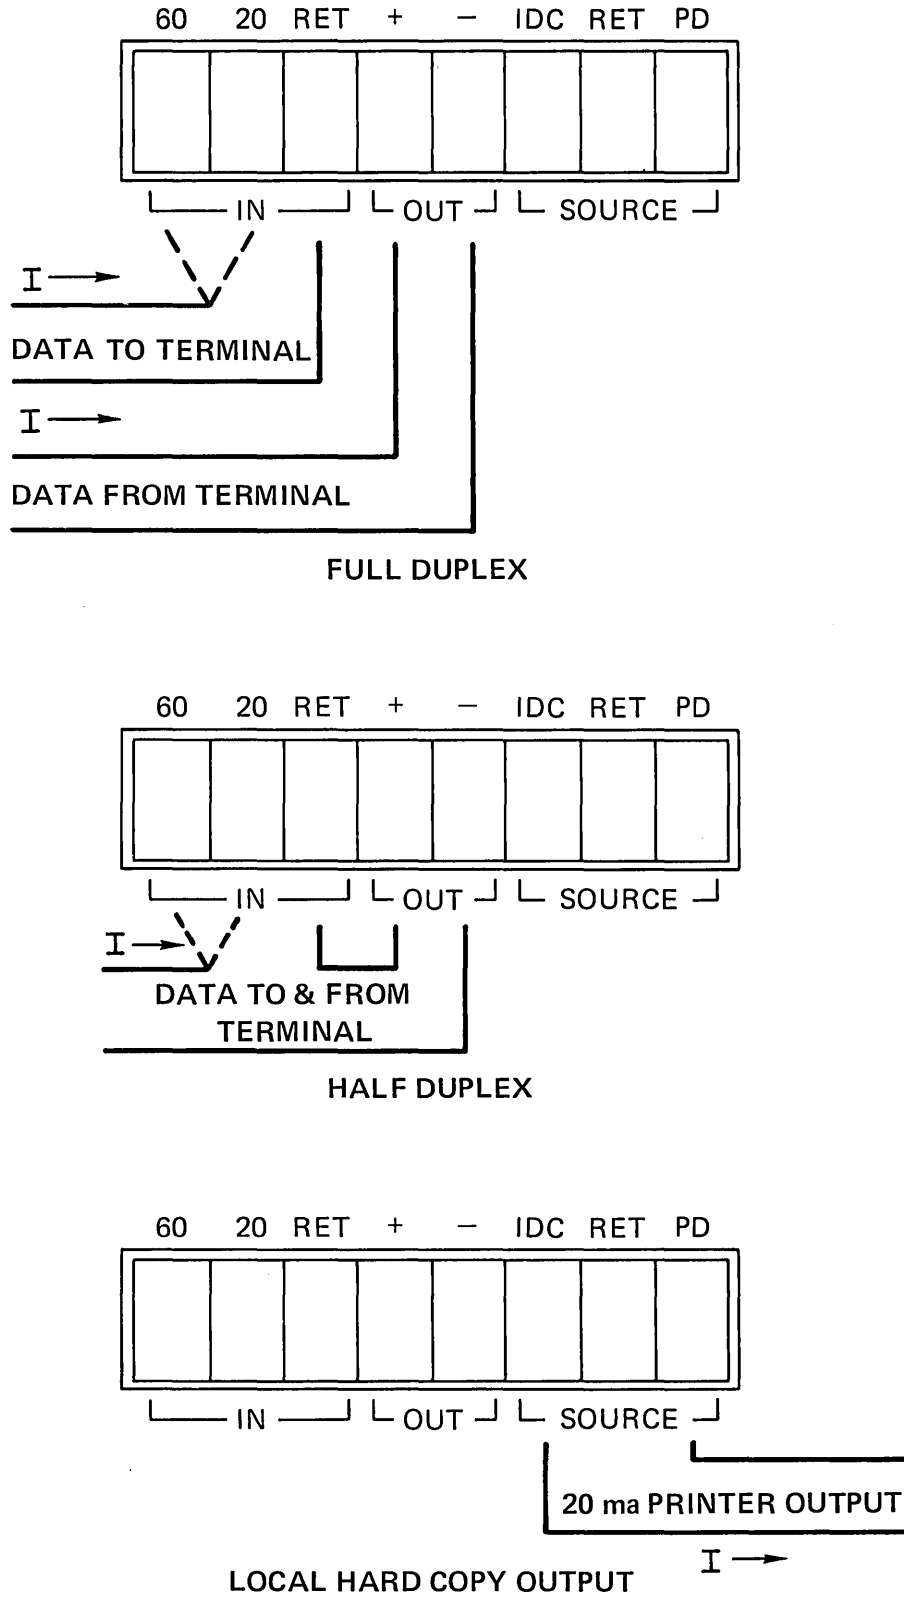


Figure 7-2 Wiring to VISTAR Current Loop Terminal Strip

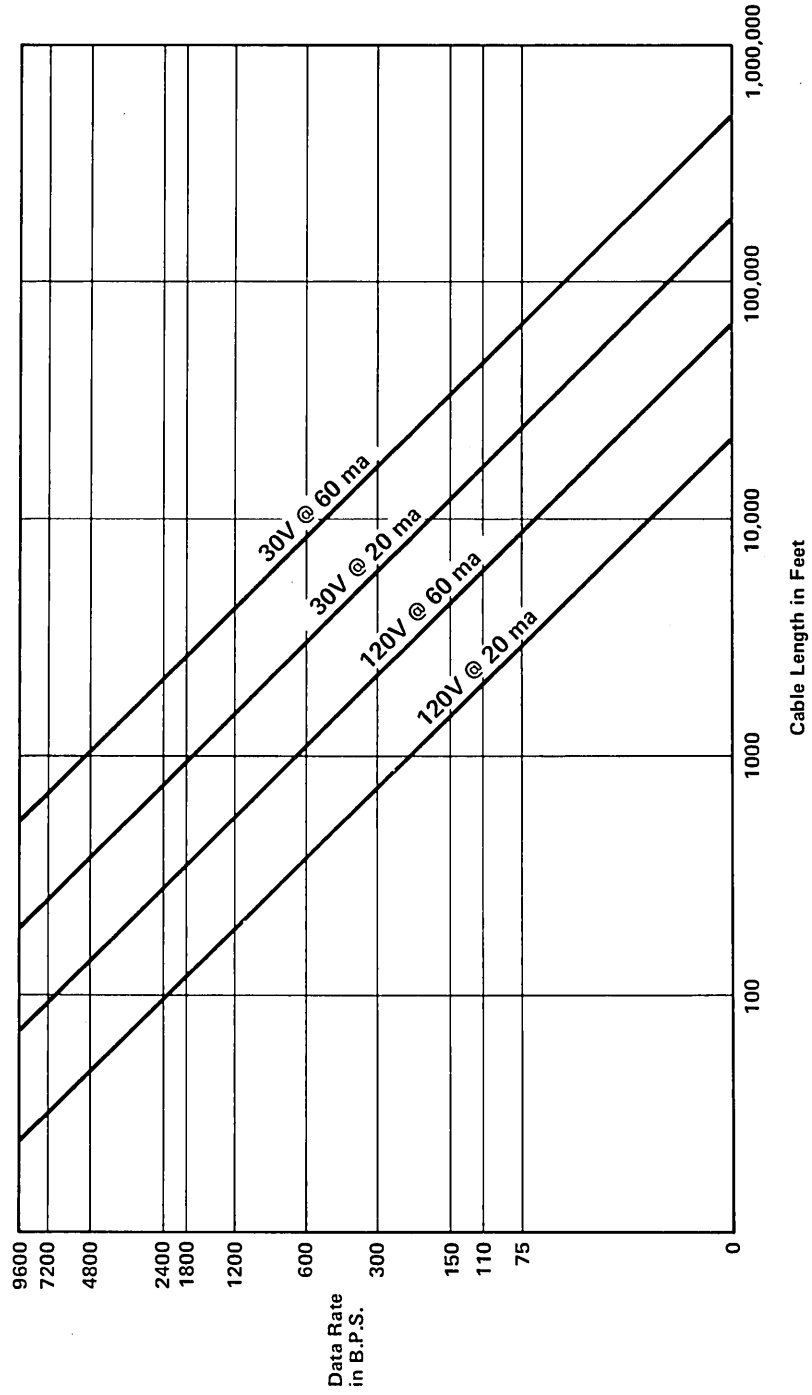


Figure 7-3 I/O Rates as a Function of Distance

8. COMPATIBILITY WITH OTHER INFOTON VISTAR SERIES DISPLAY TERMINALS

Present users of INFOTON "VISTA" series display terminals have little or no problem in adapting their application to use the VISTAR. The following list summarizes differences that may arise.

1. Screen Size

Software designed for use in Page Mode and assuming a 10 or 20 line screen size will require slight modification for the 24-line VISTAR. Applications totally designed for Roll Mode should not require changes. VISTA BASIC application programs which rely on the use of 32 or 64 character lines will require modification to conform with an 80 character line.

2. Blink Mode

VISTA BASIC or VISTA STANDARD software using the BLINK START and/or BLINK STOP codes will have to be modified, since these codes are not recognized by the VISTAR. If received by the VISTAR these codes will be ignored and the cursor will not advance.

3. Page Mode Code

Software for the VISTA STANDARD using the Page Mode code (030_g or Control X) to switch the unit to Page Mode will have to be modified. This code will be ignored if received by the VISTAR.

4. 3600 BPS Speed

The VISTAR, unlike the VISTA STANDARD, does not have 3600 bits per second as one of its switch selectable data rates.

9. OPERATING INSTRUCTIONS

INITIAL SETUP

At the start of any operating period, we recommend that you follow these procedures before transmitting data to the data line.

1. Set the LOCAL/ON LINE switch to LOCAL .
2. Switch to ON position. Watch for the indicator light to come on. Allow 30 seconds for warm-up.
3. Adjust the INTENSITY control for your viewing comfort.
4. Adjust the VERTICAL and HORIZONTAL controls for a stable image.
5. Type a message and see that it is correctly written on the screen. When completing the message on a given line, press the CARRIAGE RETURN and then the LINE FEED key. This action places the cursor in the first character position of the next line.

ESTABLISH COMMUNICATION

The next step depends upon the communication link used to the computer. If this is a direct connection or a private wire phone-line connection, the VISTAR is ready to operate.

To begin, set the front panel switch to the Character mode. On the rear interface control panel set the FULL DUPLEX/HALF DUPLEX switch to agree with the operation of the computer. Also the parity switch, and the number of bits per character. If power is provided to the communication link, then switching the unit from LOCAL to ON LINE will connect the terminal to the computer, and any depression of a code-generating key will cause a transmission to the computer.

If the VISTAR is connected via switched phone lines the computer must be called to establish the line. Before placing the call, however, switch the unit from LOCAL to LINE. Make the appropriate settings (rear of unit) for the FDX/HDX, data rate, bits per character and parity.

Operation at this point depends upon the particular computer system used.

In full Duplex, information will be displayed only if the computer at the end of the data line echoes back the information transmitted from the keyboard. This allows you to verify that the message you transmitted on the data line was in fact received by the computer. All computers the VISTAR may be connected to do not necessarily have this "echo back" capability.

In Half Duplex, data is routed from the keyboard to the display so you see what is actually being transmitted to the data line. In this mode, the computer does not echo data back.

If, by mistake, you should select Half Duplex when the computer is operating in Full Duplex, double characters will appear on the screen. The switch should then be turned to the Full Duplex position.

Whenever a character is received with incorrect parity, that character will be replaced by the RUBOUT code and displayed as a solid 5 x 7 block. If repeated parity errors occur, check that the parity switch on the rear interface panel is set to correspond to the parity required by the computer system to which the terminal is connected.

Once the operation of the unit has been verified in the Character Mode, you may want to switch to Block Mode. Before doing this, the computer must be operating in Half Duplex. This may be accomplished by sending a pre-selected code to the computer instructing it to suppress the echo-back of data.

After switching to Block Mode, set the Automatic Carriage Return Switch to the position which is most convenient. If the computer system requires that each message be terminated by a Carriage Return code, then you may generate this code automatically at the end of a transmission. If some other code is necessary you will be required to enter it from the keyboard directly, in which case the Automatic Carriage Return feature would not be desired.

As you type characters on the keyboard in Block Mode, the characters will appear on the screen but will not be transmitted to the computer. A message will be transmitted only when the Transmit Line or Transmit Page key is depressed. A transmission in progress may be terminated by depressing the BREAK key.

APPENDIX A

VISTAR CODE SET

Bits 4, 3, 2, 1	Bits 7, 6, 5							
	000	001	010	011	100	101	110	111
0000	NULL		SPACE	0	@	P	@	P
0001			!	1	A	Q	A	Q
0010			"	2	B	R	B	R
0011			#	3	C	S	C	S
0100			\$	4	D	T	D	T
0101			%	5	E	U	E	U
0110			&	6	F	V	F	V
0111	BELL		'	7	G	W	G	W
1000	HOME		(8	H	X	H	X
1001		CURSOR RIGHT)	9	I	Y	I	Y
1010	LF	CURSOR LEFT	*	:	J	Z	J	Z
1011	ERASE EOL	ESC	+	;	K	[K	[
1100	ERASE PAGE	CURSOR UP	,	<	L	\	L	\
1101	CR	CURSOR DOWN	-	=	M]	M]
1110	XMIT LINE	XMIT PAGE	.	>	N	^	N	^
1111			/	?	O	~	O	RUB OUT

The area enclosed by dashed lines represent lower case codes displayed as upper case characters.

APPENDIX B

VISTAR INPUT-OUTPUT CODES

<u>7 Bit Octal Code</u>	<u>Remarks</u>
000	Null, Control Shift P
001	Control A
002	Control B
003	Control C
004	Control D
005	Control E
006	Control F
007	* Control G. Rings bell.
010	* Control H. Backspaces some TTYs. Sends cursor Home on VISTA.
011	Control I. Horizontal tab on some TTYs.
012	* Control J. Line feed; advances display to next line - rolls screen when VISTA is in Roll Mode and cursor was at bottom of page.
013	* Control K. Erase to End of Line.
014	* Control L. Erases screen. Cursor is then sent Home.
015	* Control M. Carriage Return to beginning of line.
016	* Control N. Transmit Line.
017	Control O
020	Control P
021	Control Q
022	Control R
023	Control S
024	Control T
025	Control U
026	Control V
027	Control W
030	Control X
031	* Control Y. Cursor Right.
032	* Control Z. Cursor Left.
033	Escape. This code is generated by control shift K.
034	* Control Shift L. Cursor Up.
035	* Control Shift M. Cursor Down.
036	* Control Shift N. Transmit Page.
037	Control Shift O
040	Space
041	!
042	"

* Appears next to the codes which are VISTAR commands.

VISTAR INPUT-OUTPUT CODES (continued)

<u>7 Bit Octal Code</u>		<u>Remarks</u>
043	#	
044	\$	
045	%	
046	&	
047	'	Apostrophe
050	(
051)	
052	*	
053	+	
054	,	
055	-	
056	.	
057	/	
060	φ	
061	1	
062	2	
063	3	
064	4	
065	5	
066	6	
067	7	
070	8	
071	9	
072	:	
073	;	
074	<	
075	=	
076	>	
077	?	
100	@	
101	A	
102	B	
103	C	
104	D	
105	E	
106	F	
107	G	
110	H	
111	I	
112	J	
113	K	
114	L	

VISTAR INPUT-OUTPUT CODES (continued)

<u>7 Bit Octal Code</u>		<u>Remarks</u>
115	M	
116	N	
117	O	
120	P	
121	Q	
122	R	
123	S	
124	T	
125	U	
126	V	
127	W	
130	X	
131	Y	
132	Z	
133	[Shift K.
134	\	Shift L.
135]	Shift M.
136	↑	
137	←	
140	@	
141	A	
142	B	
143	C	
144	D	
145	E	
146	F	
147	G	
150	H	
151	I	
152	J	SEE
153	K	
154	L	NOTE
155	M	
156	N	
157	O	
160	P	
161	Q	
162	R	
163	S	
164	T	
165	U	

VISTAR INPUT-OUTPUT CODES (continued)


<u>7 Bit Octal Code</u>		<u>Remarks</u>
166		V
167		W
170		X
171	SEE	Y
172		Z
173	NOTE	[
174		\
175]
176		↓
177		Delete, Rub Out. Non-displaying in Character Mode. Displays as parity error block when generated from keyboard in Block Mode.

NOTE: When received on the data line, these codes are stored in memory and can therefore be re-transmitted. Normally, they are reserved for the display of lower case characters.

APPENDIX C

VISTAR ASYNCHRONOUS SERIAL INTERFACE EIA SIGNALS
 AND PIN CONNECTIONS

EIA RS-232C Name	CCITT V-24 Name	Description	EIA Pin No	MOLEX Pin No.	Comments
BA	103	Data transmitted from terminal	2	1	Logical "1" = OFF = -12V Logical "0" = ON = +12V 300 ohm source impedance.
CA	105	Request to send signal from terminal	4	2	Goes high (+12V) when the terminal is ready to transmit
CB	106	Clear to send signal to terminal	5	3	Must be high to allow terminal to send; is supplied by a modem.
BB	104	Data transmitted to terminal	3	4	Logical "1" = OFF = -5V to -25V Logical "0" = ON = +5V to +25V 6.8K ohm load impedance
CF	109	Carrier present signal to terminal	8	5	Must be high to allow terminal to receive; is supplied by a modem.
CD	108.2	Data terminal ready signal from terminal	20	8	Goes high (+12V) when terminal is ON LINE; is low when terminal is in LOCAL mode.
		External clock input at TTL logic levels	No connection to EIA Interface	10	For use with Selector Switch in EXT position
AB	102	Signal ground	7	12	

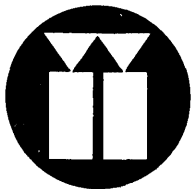

Infoton

INFOTON INCORPORATED SECOND AVENUE, BURLINGTON, MASSACHUSETTS 01803
SUBSIDIARY OF OPTICAL SCANNING CORPORATION
AREA CODE 617 272-6660

Document No. 02327
October/1972
2500

102683696